



## LIST OF PARTS

1 Barrel	31 Safety	61 Locking Nut M4	91 Trigger Guard - Magazine Version
2 Rear Sight	32 Safety Pawl	62 Adjusting Screw, Trigger Overtravel (C)	92 Magazine Catch
3 Front Sight	33 Safety Pawl Spring	63 Locking Nut	93 Magazine Catch Spring
4 Front Sight Base	34 Roller	64 Nylon Pin (2x)	94 Magazine Shell
5 Front Sight Base Screw 05	35 Safety Pawl Pin	65 Trigger Mechanism	95 Follower
6 Front Sight Base Screw 03	36 Sear	66 Screw	96 Magazine Spring
7 Rear Sight Base Screw (2x)	37 Sear Stop	67 Spring Washer	97 Floor Plate Lock
8 Front Sight Detent	38 Sear Spring	68 Stock	98 Magazine Floor Plate
9 Detent Spring	39 Sear Pin	70 Butt Plate	99 Magazine Floor Plate Insert
10 Pin, Front Sight Detent	40 Bolt Stop	71 Screw, Butt Plate	106 Trigger Spring
11 Front Sight Cover	41 Bolt Stop Spring	73 Swivel Wood Screw	107 Stay
12 Receiver	42 Safety Pin	74 Sling Swivel	108 Reinforcer Screw *
13 Bolt	43 Retaining Plate	75 Swivel Screw	109 Spring Washer *
14 Bolt Handle Knob **	44 Ejector	76 Swivel Screw Washer	110 Washer *
15 Extractor	45 Ejector Pin	77 Swivel Assembly	111 Reinforcer Nut *
16 Extractor Collar	46 Ejector Spring	78 Trigger Guard - Box Version	112 Rear Sight Base
17 Firing Pin	47 Ball	79 Box Shell	113 Rear Sight Blade 200m
18 Firing Pin Spring	48 Holder	80 Floor Plate	114 Rear Sight Blade 300m
19 Support, Firing Pin Spring	49 Trigger	81 Floor Plate Pin	115 Rear Sight Spring
20 Nut, Firing Pin Spring	50 Trigger Lever	82 Floor Plate Latch	116 Rear Sight Spring Screw
21 Cocking Piece	51 Trigger Lever Pin	83 Spring, Floor Plate Latch	117 Rear Sight Blade Pin
22 Pin, Firing Pin Nut	53 Adjusting Screw, Set Trigger	84 Pin, Floor Plate Latch	118 Locking Screw
23 Cap	54 Set Trigger Lever	85 Magazine Box Spring	119 Nut
24 Bolt Sleeve	55 Spring, Set Trigger Lever	86 Magazine Follower	120 Washer
25 Disassy Catch	56 Pin	87 Front Spacer	121 Forend Bolt
26 Disassy Catch Spring	57 Retaining Ring	88 Frame Screw, Front	
27 Disassy Catch Pin	58 Adjusting Screw (B)	89 Rear Spacer	
28 Disassy Catch Plunger	59 Spring, Trigger Pull	90 Frame Screw, Rear	
29 Plunger Spring	60 Adjusting Screw, Trigger Pull (A)		
30 Plunger Pin			

\* Medium 2x, Magnum 1x

\*\* Does not apply to Magnum