



LIST OF PARTS

1	Frame *	35	Magazine Catch Spring Screw
2	Slide Stop *	36	Magazine Body *
3	Slide Stop Spring	37	Magazine Base
4	Slide Stop Spring Pin	38	Magazine Base Lock
5	Trigger *	39	Magazine Spring *
6	Trigger Pin	40	Follower *
7	Trigger Bar *	41	Recoil Spring *
8	Trigger Spring	42	Recoil Spring Guide *
9	Pin (3x)	43	Barrel *
10	Ejector *	44	Slide *
11	Sear *	45	Front Sight
12	Sear Spring	46	Front Sight Pin
13	Sear Pin *	47	Loaded Chamber Indicator *
14	Firing Pin Block Lever *	48	Loaded Chamber Indicator Spring *
15	Firing Pin Block Lever Spring *	49	Loaded Chamber Indicator Nut *
16	Hammer *	50	Extractor *
17	Disconnecter *	51	Extractor Pin
18	Hammer Pin	52	Extractor Spring
19	Hammer Pin Retaining Peg	53	Rear Sight
20	Main Spring Strut	54	Firing Pin *
21	Main Spring	55	Firing Pin Spring
22	Main Spring Plug *	56	Firing Pin Stop *
23	Main Spring Plug Pin	57	Firing Pin Coiled Pin *
24	Magazine Guide	58	Firing Pin Block Stop *
25	Magazine Guide Pin	59	Firing Pin Block Stop Spring *
26	Grip Panel - Left *	60	Hammer Decocking Lever Controller *
27	Grip Panel - Right *	61	Decocking Lever *
28	Grip Panel Screw (2x) *	62	Decocking Lever Spring *
29	Safety - Left *	63	Safety - Right *
30	Safety Detent Plunger - Left *	64	Safety Detent Plunger - Right *
31	Safety Detent Plunger Spring (2x) *	65	Slide Stop - Right *
32	Magazine Catch *	66	Trigger Overtravel Adjusting Screw *
33	Magazine Catch Spring		
34	Trigger Bar Spring		

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.