



LIST OF PARTS

1	Frame *	29	Safety - Left *
2	Slide Stop *	30	Safety Detent Plunger - Left
3	Slide Stop Spring	31	Safety Detent Plunger Spring *
4	Slide Stop Spring Pin	32	Magazine Catch
5	Trigger *	33	Magazine Catch Spring
6	Trigger Pin	34	Trigger Bar Spring
7	Trigger Bar	35	Magazine Catch Spring Screw
8	Trigger Spring	36	Magazine *
9	Pin (3x)	37	Firing Pin *
10	Ejector	38	Firing Pin Spring
11	Sear	39	Firing Pin Stop *
12	Sear Spring	40	Buffer *
13	Sear Pin	41	Recoil Spring *
14	Safety - Right *	42	Recoil Spring Guide *
15	Safety Detent Plunger - Right *	43	Barrel *
16	Hammer *	44	Slide *
17	Disconnecter	45	Front Sight
18	Hammer Pin	46	Front Sight Pin
19	Hammer Pin Retaining Peg	47	Loaded Chamber Indicator *
20	Main Spring Strut *	48	Loaded Chamber Indicator Spring *
21	Main Spring	49	Loaded Chamber Indicator Nut *
22	Main Spring Plug *	50	Extractor *
23	Main Spring Plug Pin	51	Extractor Pin
24	Magazine Guide *	52	Extractor Spring
25	Magazine Guide Pin	53	Rear Sight *
26	Grip Panel - Left *	54	Securing Screw (2x) *
27	Grip Panel - Right *	55	Trigger Screw *
28	Grip Panel Screw (2x) *	56	Shaped Washer (2x) *

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.