


## Assembly / Disassembly NOVA48 Gen2

Before disassembly check if the grenade is not armed with gas. If this is the case, start it in a safe place with goggles.

### I. Disassembly NOVA48 Gen2

- ✓ Start by unscrewing the bottom part of the grenade (the part having the serial number) if the unscrewing is difficult, a hole (red arrow) allowing the insertion of a screwdriver or the pin was planned to allow a better outlet.

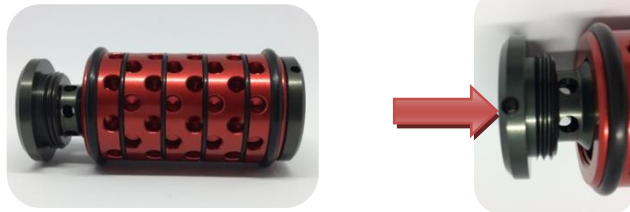

- ✓ After separation of the grenade in two you end up with the central hull and the high part on one side and the hull and detonator on the other, attention a flat seal is free, do not lose it.



- ✓ You can now unscrew the hull part high (it is possible that the flat seal is to remain "to stick" on the hull ").



- ✓ Finally you can unscrew the detonator from the bottom hull.



Be careful not to disassemble the detonator itself.

## 2. Assembly NOVA48 Gen2

- ✓ To reassemble the grenade follow the disassembly steps in the opposite direction.
- ✓ Screw the detonator on the hull bottom part



- ✓ Screw the hull up on the central hull.



- ✓ Put the flat seal at the bottom of the central hull in the groove of the upper hull



- ✓ Screw the hull down into the center hull, taking care not to drop the flat seal, screw it all the way in, and leave no gap between the two parts.



### **Address/contact :**

e-mail : [contact@strataim.fr](mailto:contact@strataim.fr)

SAS STRATAIM  
4J Chemin de Palente - 25000 Besançon