


Assembly / Disassembly NOVA48 Gen2

Before disassembly check if the grenade is not armed with gas. If this is the case, start it in a safe place with goggles.

1. Disassembly NOVA48 Gen2

- ✓ Start by unscrewing the bottom part of the grenade (the part having the serial number) if the unscrewing is difficult, a hole (red arrow) allowing the insertion of a screwdriver or the pin was planned to allow a better outlet.

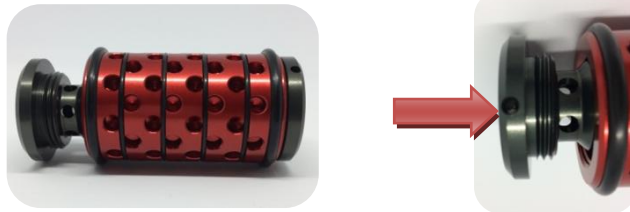

- ✓ After separation of the grenade in two you end up with the central hull and the high part on one side and the hull and detonator on the other, attention a flat seal is free, do not lose it.



Flat seal



- ✓ You can now unscrew the hull part high (it is possible that the flat seal is to remain "to stick" on the hull ").



- ✓ Finally you can unscrew the detonator from the bottom hull.




Be careful not to disassemble the detonator itself.

2. Assembly NOVA48 Gen2

- ✓ To reassemble the grenade follow the disassembly steps in the opposite direction.
- ✓ Screw the detonator on the hull bottom part



- ✓ Screw the hull up on the central hull.

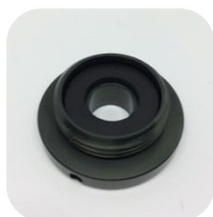

- ✓ Put the flat seal at the bottom of the central hull in the groove of the upper hull



- ✓ Screw the hull down into the center hull, taking care not to drop the flat seal, screw it all the way in, and leave no gap between the two parts.



Adress/contact :

e-mail : contact@strataim.fr

SAS STRATAIM
4J Chemin de Palente - 25000 Besançon