

WIND WIZARD II™

Instruction Manual



Instruction #1036133
Product #102579

STOP!

If you have a problem with this product, DON'T RETURN IT TO THE STORE WHERE YOU PURCHASED IT. Contact customer service at...

Battenfeld 2501 LeMone Industrial Blvd. / Columbia, MO 65201
573-445-9200 / Email: sales@battenfeldtechnologies.com
Or visit our website @ www.BTlbrands.com

NOT WARRANTED AGAINST MISUSE, ABUSE, OR COMMERCIAL USE.
Limited Warranty

Every Caldwell product is warranted to be free of defects in materials and workmanship for a period of one (1) year from the date of original purchase. Caldwell will, at its option, repair or replace without charge, except for transportation costs, parts that fall under normal use and service when operated and maintained in accordance with our instructions. This warranty does not apply to normal wear or to items whose life is dependent upon their use and care. This warranty is in lieu of all other warranties, expressed or implied and releases Caldwell, its affiliates, and its vendors from all other obligations and liabilities.



WARNING: IMPORTANT SAFETY INFORMATION!

- Always practice safe firearm handling
- Always hold the forend of the firearm when shooting off of this shooting rest or any rest. If it is not held, the recoil can cause the forend to jump out of the front bag, possibly causing damage to the firearm or injuring the shooter.

Function

I. Wind Speed

- A. Units: m/s (meters per second), km/s (kilometers per second), ft/min (feet per minute), knots (nautical miles per hour), mph (miles per hour)

- B. Settings: Cu (Current Wind Speed), AVG (Average Wind Speed), MAX (Maximum Wind Gust)
C. This wind meter also has a built in Beaufort Scale bar graph

2. Temperature

- A. Units: F° (Fahrenheit) or C° (Celsius)
B. Wind chill indication

3. Battery meter and low battery warning

4. LCD back-light

5. Auto/Manual off

Operation

1. Install the battery in the battery compartment (Note: LCD will blink for a second)
2. To turn the unit ON: Press and hold MODE for 3 seconds
3. To turn the unit OFF: Press and hold SET for 3 seconds
4. To turn the backlight on: Pressing any button will turn the backlight on for 5 seconds
5. To change between wind speed units: Press and hold MODE for 3 seconds until the current unit begins to blink, press the SET button to cycle through the different units, then press the MODE button to exit
6. To change between wind speed settings: Press and hold MODE for 3 seconds until the current unit begins to blink,

press the SET button to cycle through the different wind speed settings (Cu, MAX, AVG), then press the MODE button to exit

7. To change between temperature units: Press the C°/F° button

8. Wind chill: When the temperature is below 0 °C, the wind chill symbol will display on the LCD screen

Specifications:

Wind speed range

Unit	Range	Resolution	Threshold	
Accuracy				
m/s	0~30	0.1	0.1	
Ft/min	0~5860	19	39	
Knots	0~55	0.2	0.1	±5%
km/hr	0~90	0.3	0.3	
Mph	0~65	0.2	0.2	

Temperature range

Unit	Range	Resolution	Accuracy
°C	-10 °C~45 °C	0.2	±2 °C
°F	14 °F~113 °F	0.36	±3.6 °F

Battery	CR2032 3.0V
Thermometer	NTC thermometer
Operating temperature	-10C~45C(14F~113F)
Operating humidity	≤90%RH
Store temperature	-40C~60C(-40F~140F)
Current consumption	About 3mA
Weight	70g

Battenfeld
Technologies, Inc.

501 LeMone Industrial Blvd. / Columbia, MO 65201
73-445-9200 / Email: sales@battenfeldtechnologies.com