

GARMIN®

XERO® C2

Radar Chronograph



Owner's
Manual

Table of Contents

Introduction.....	3	Viewing Device Tips.....	14
Device Overview.....	3	Connectivity Settings.....	14
Installing the Tripod.....	3	Resetting Data and Settings.....	14
Charging the Device.....	4	Setting a Device Passcode.....	14
Turning the Device On or Off.....	4	Changing Your Device Passcode....	14
		Deleting Your Device Passcode.....	14
Recording Shot Data.....	5	Device Information.....	16
Alignment Considerations.....	5	Software Updates.....	16
Automatic Radar Configuration.....	5	Updating the Software Using the	
Starting a Rifle Session.....	5	ShotView™ App.....	16
Starting a Pistol Session.....	6	Updating Software with Garmin	
Starting a Bow Session.....	6	Express™	16
Starting an Air Rifle Session.....	7	Device Care.....	17
Starting a Session for Other		Cleaning the Outer Casing.....	17
Projectiles.....	8	Getting More Information.....	17
Changing Sessions.....	8	Viewing E-label Regulatory and	
Ending a Session.....	8	Compliance Information.....	17
Resuming a Saved Session.....	8	Specifications.....	18
Deleting a Saved Session.....	8		
Shot Data.....	10	Troubleshooting.....	19
Changing Data Fields.....	10	Resetting the Device.....	19
Data Fields.....	10	The chronograph is not detecting my	
Viewing the Shot List.....	11	shot velocity.....	19
Changing the Shot List Data Field...	11	The chronograph is detecting shots from	
Deleting a Shot from the Shot List...	11	the shooter next to me.....	19
Viewing the Session Summary.....	11	The recorded velocity is higher when the	
Viewing Session History.....	11	chronograph is mounted to a rifle.....	19
		The chronograph temperature is	
Connectivity Features.....	12	approaching a critical level.....	19
ShotView™ App.....	12	The chronograph does not turn on.....	19
Pairing Your Smartphone.....	12	My language is missing from the	
Pairing a Garmin® Watch.....	12	chronograph.....	19
Applied Ballistics® Ecosystem			
Integration.....	12		
Settings.....	13		
Changing the Units of Measure.....	13		
Changing the Display Color.....	13		
Changing the Backlight Brightness.....	13		
Changing the Backlight Timeout.....	13		
Enabling Projectile Weight Entry.....	13		
Enabling Downrange Mode.....	13		
Changing the Device Language.....	13		

Introduction

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Always inspect your equipment before using a bow or firearm. You are responsible for understanding and complying with any applicable regulations for using a bow or firearm.

Always understand your target and what lies beyond your target before taking a shot. Failure to account for your shooting environment could cause property damage, injury, or death.

Only access the information displayed on the device with a glance. Always maintain awareness of your shooting environment and do not stare at the display or become distracted by the display. Failure to account for your shooting environment could cause property damage, injury, or death.

Do not interact with the device while handling your weapon. Doing so could cause distraction or reduce awareness of your shooting environment, which could lead to an accident resulting in serious personal injury or death.

Device Overview



- ① **USB-C® port (under weather cap):** Connect the USB-C cable to charge the device or download software updates using your computer.
- ② **OK:** Press to select menu options.
- ③ **↶ (PWR):** Press to turn the device on.
Press to return to the previous screen.
Hold for two seconds to turn off the device.
- ④ **^ ∨:** Press to scroll through the menu.

Installing the Tripod

The Xero® C2 chronograph tripod mount uses 1/4 in.-20 thread size and is compatible with most tripods.

Screw the tripod ① into the bottom of the Xero C2 chronograph.



Charging the Device

WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury, product damage, or other property damage caused by battery exposure to extreme heat, store the device out of direct sunlight.

NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

The device is powered by a lithium-ion battery that you can charge using a standard AC adapter or a USB-C® port on your computer.

NOTE: The device will not charge when outside the approved temperature range ([Specifications, page 18](#)).

- 1 Pull up the weather cap from the USB-C port.
- 2 Plug the cable into the USB-C port on the device.
- 3 Plug the other end of the cable into an external power source, such as an AC adapter or a USB-C port on your computer.
- 4 Charge the device completely.
It can take up to 5 hours to fully charge the battery.

Turning the Device On or Off

- To turn on the device, press **PWR**.
- To turn off the device, hold **PWR** for 2 seconds.

Recording Shot Data

Alignment Considerations

For best results, you should always follow these alignment considerations while using your chronograph.

- Always observe the position diagram for your projectile type.
- Always ensure the large, flat side of the chronograph is pointed at the target and the screen is facing you.
- Always ensure the chronograph has an unobstructed view of the target.
- Always ensure the projectile can travel at least 20 meters or 20 yards in front of the chronograph.

Automatic Radar Configuration

The Xero® C2 chronograph automates some setup steps to help you get started faster.

Frequency Selection: When you start a session, the chronograph automatically checks for interference from other radars. If the chronograph detects interference from other radar systems, it switches to a clean channel automatically.


Position Offset: There is no need to enter a position offset manually. The Xero C2 chronograph uses an advanced algorithm that does not need position input to measure true muzzle velocity.

Starting a Rifle Session

NOTICE

Always ensure you position the chronograph so that it is not directly exposed to ejecting cartridge cases, muzzle blast, or other hazards that may damage the chronograph.

- 1 Select **NEW SESSION > RIFLE**.
- 2 Select a velocity range.
- 3 If you have enabled the **PROJECTILE WEIGHT ENTRY** setting (*Enabling Projectile Weight Entry, page 13*), select an option:
 - To calculate the kinetic energy and power factor of your bullet, select **YES**, and enter the weight of your bullet.
 - To continue without calculating kinetic energy and power factor, select **SKIP**.
- 4 If necessary, observe the alignment diagram and press **OK** to continue.
- 5 Position the rifle next to the chronograph, within 15 to 35 cm (5 to 15 in.) of the chronograph ①, and ensure the chronograph is 15 to 35 cm (5 to 15 in.) behind the muzzle ②.

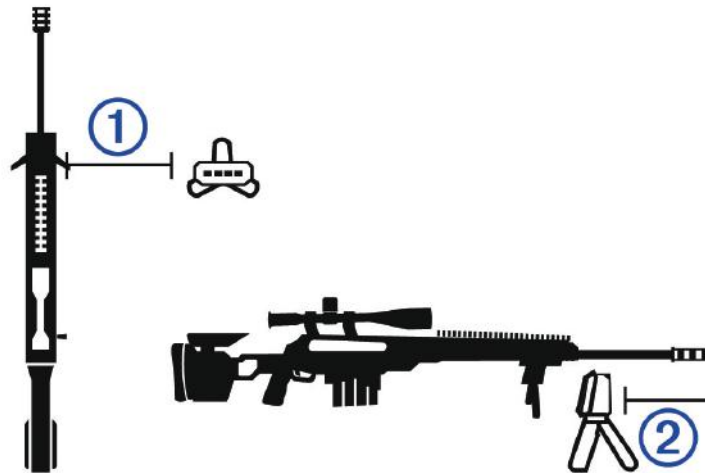

NOTE: The chronograph can be positioned on either side of the rifle.

- 6 Point the chronograph at the target with the screen facing you.
The device detects shots and displays measurements automatically as you shoot.

Starting a Pistol Session

NOTICE

Always ensure you position the chronograph so that it is not directly exposed to ejecting cartridge cases, muzzle blast, or other hazards that may damage the chronograph.

- 1 Select **NEW SESSION > PISTOL**.
- 2 Select a velocity range.
- 3 If you have enabled the **PROJECTILE WEIGHT ENTRY** setting (*Enabling Projectile Weight Entry, page 13*), select an option:
 - To calculate the kinetic energy and power factor of your bullet, select **YES**, and enter the weight of your bullet.
 - To continue without calculating kinetic energy and power factor, select **SKIP**.
- 4 If necessary, observe the alignment diagram and press **OK** to continue.
- 5 Point the chronograph at the target with the screen facing you.
- 6 Hold the pistol over the chronograph so the barrel is positioned 15 to 35 cm (5 to 15 in.) above the chronograph ①.



The device detects shots and displays measurements automatically as you shoot.


Starting a Bow Session

NOTICE

Always ensure that you position the chronograph so that it is not directly exposed to hazards that may damage the chronograph.

When you use the chronograph for archery, you should use a target that is at least 4 meters or 4 yards away from you.

- 1 Select **NEW SESSION > BOW**.
- 2 If you have enabled the **PROJECTILE WEIGHT ENTRY** setting (*Enabling Projectile Weight Entry, page 13*), select an option:
 - To calculate the kinetic energy of your arrow, select **YES**, and enter the weight of your arrow.
 - To continue without calculating kinetic energy, select **SKIP**.
- 3 If necessary, observe the alignment diagram, and press **OK** to continue.
- 4 Point the chronograph at the target with the screen facing you.
- 5 Hold the bow over the chronograph so the arrow is 15 to 35 cm (5 to 15 in.) above the chronograph ①.

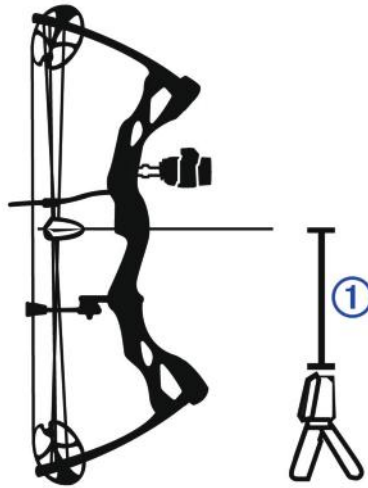


The device detects shots and displays measurements automatically as you shoot. The measured velocity is the speed of the arrow as it passes over the chronograph.

Starting an Air Rifle Session

NOTICE

Always ensure you position the chronograph so that it is not directly exposed to ejecting cartridge cases, muzzle blast, or other hazards that may damage the chronograph.

- 1 Select **NEW SESSION > AIR RIFLE**.
- 2 If you have enabled the **PROJECTILE WEIGHT ENTRY** setting (*Enabling Projectile Weight Entry, page 13*), select an option:
 - To calculate the kinetic energy and power factor of your projectile, select **YES**, and enter the weight of your projectile.
 - To continue without calculating kinetic energy and power factor, select **SKIP**.
- 3 If necessary, observe the alignment diagram and press **OK** to continue.
- 4 Position the air rifle next to the chronograph, within 15 to 35 cm (5 to 15 in.) of the chronograph ①, and ensure the chronograph is within 15 to 35 cm (5 to 15 in.) behind the muzzle ②.

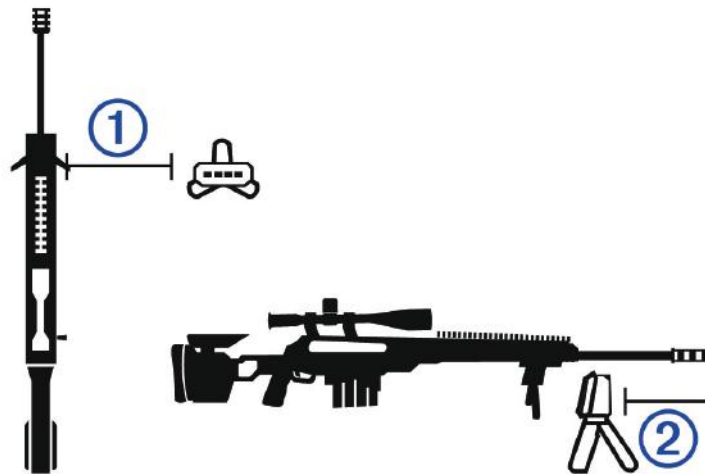

NOTE: The chronograph can be positioned on either side of the air rifle.

- 5 Point the chronograph at the target with the screen facing you.
- The device detects shots and displays measurements automatically as you shoot.


Starting a Session for Other Projectiles

NOTICE

Always ensure you position the chronograph so that it is not directly exposed to ejecting cartridge cases, muzzle blast, or other hazards that may damage the chronograph.

You can use the Xero® C2 chronograph to measure velocity of other projectiles that may not fit into other categories, such as some muzzleloading firearms, shotguns with slugs, slingshots, or other weapons.

- 1 Select **NEW SESSION > OTHER**.
- 2 Select a velocity range.
- 3 If you have enabled the **PROJECTILE WEIGHT ENTRY** setting (*Enabling Projectile Weight Entry, page 13*), select an option:
 - To calculate the kinetic energy of your projectile, select **YES**, and enter the weight of your projectile.
 - To continue without calculating kinetic energy, select **SKIP**.
- 4 Point the chronograph at the target with the screen facing you.
- 5 Position the weapon next to the chronograph, within 15 cm (5 in.) ① to 35 cm (15 in.) ② of the chronograph.

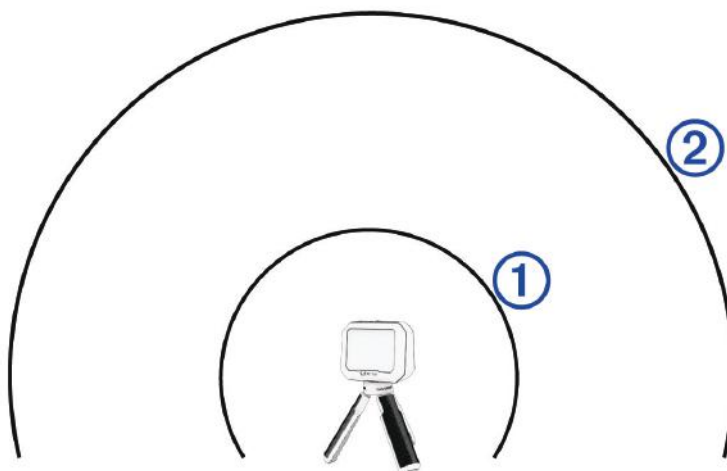

NOTE: The weapon can be positioned at any point around the chronograph as long as the weapon and chronograph are positioned 15 to 35 cm (5 to 15 in.) away from each other. You should choose a location that works best for your weapon.

The device detects shots and displays measurements automatically as you shoot.

Changing Sessions

You can switch to a saved session or start a new session while a session is in progress.

- 1 During a session, press **▼**.
- 2 Select an option:
 - To resume a saved session, select a session.
 - To start a new session, select **NEW SESSION**.

Ending a Session

- 1 During a session, press **↶**.
- 2 Select **END SESSION**.

Resuming a Saved Session

- 1 From the main menu, select **SAVED SESSIONS**.
- 2 Select a session.
- 3 Select **RESUME SESSION**.

Deleting a Saved Session


- 1 Select **SAVED SESSIONS**.
- 2 Select a session.

3 Select **DELETE SESSION**.

Shot Data

Each time you take a shot during a session, the chronograph records the shot automatically.

TIP: You can press OK, and select DATA FIELDS to change the information displayed in each data field.

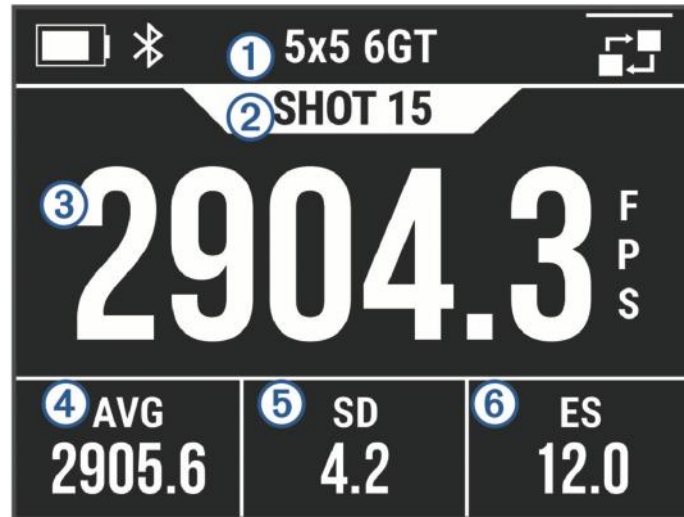

①	Session name
②	Number of shots recorded
③	Velocity of the most recent shot
④	Average velocity recorded during the session (DATA FIELD 1)
⑤	Standard deviation of shots recorded during the session (DATA FIELD 2)
⑥	Extreme spread of shots recorded during the session (DATA FIELD 3)

Changing Data Fields

You can change the data fields and the data field layout that displays your shot data.

- 1 Select an option:
 - To change data fields during a session, press **OK**, and select **DATA FIELDS**.
 - To change data fields before a session, select **SETTINGS > DATA FIELDS**.
- 2 If necessary, select **LAYOUT** to cycle through data field layouts (optional).
- 3 Select a data field.
- 4 Select a data type.

Data Fields

AVERAGE (AVG): Displays the average velocity recorded in the current session.

AVERAGE KINETIC ENERGY (AVG KE): Displays the average kinetic energy for shots recorded in the current session.

AVERAGE POWER FACTOR (AVG PF): Displays the average power factor for shots recorded in the current session.

DEVIATION FROM AVERAGE (DEV/AVG): Displays how far the velocity of the most recent shot deviates from the average velocity of shots in the current session.

EXTREME SPREAD (EXT SPRD): Displays the extreme spread of the shot velocities recorded in the current session. Extreme spread is the difference between the maximum and minimum velocities recorded.

KINETIC ENERGY (KE): Displays the kinetic energy calculated for the most recent shot.

NOTE: You must enable the PROJECTILE WEIGHT ENTRY setting to use this data field ([Enabling Projectile Weight Entry, page 13](#)).

MAXIMUM (MAX): Displays the maximum velocity recorded in the current session.

MINIMUM (MIN): Displays the minimum velocity recorded in the current session.

POWER FACTOR (PF): Displays the power factor for the most recent shot. Power factor is a measurement of the momentum of the projectile.

NOTE: You must enable the PROJECTILE WEIGHT ENTRY setting to use this data field (*Enabling Projectile Weight Entry, page 13*).

SHOTS: Displays the number of shots taken in the current session.

STANDARD DEVIATION (STD DEV): Displays the standard deviation of shot velocities in the current session. The standard deviation is a number that shows how much recorded velocities deviate from the average velocity recorded. A high standard deviation means that the recorded velocities are more spread out from the average velocity recorded. A low standard deviation means that the recorded velocities are close to the average velocity recorded.

Viewing the Shot List

The shot list shows a list of your shots for a session.

Select an option:

- To view the shot list for the current session, press **OK**, and select **SHOT LIST**.
- To view the shot list for a previous session, select **SAVED SESSIONS**, select a session, and select **SHOT LIST**.

Changing the Shot List Data Field

Before you can select from all available data fields in the shot list, you must enable the PROJECTILE WEIGHT ENTRY setting (*Enabling Projectile Weight Entry, page 13*).

You can change the data field that displays with each shot on the shot list.

1 Select an option:

- To change data fields during a session, press **OK**, and select **DATA FIELDS**.
- To change data fields before a session, select **SETTINGS > DATA FIELDS**.

2 Select **SHOT LIST DATA**.

3 Select a data field.

Deleting a Shot from the Shot List

You can delete shots from your shot list. This can be useful if there is a shot that you do not want to include in your session statistics.

NOTE: If you delete a shot from the shot list on the chronograph after you sync with the ShotView™ app, the shot will not be deleted from the app.

1 Select an option:

- To delete a shot from the current session, press **OK**, and select **SHOT LIST**.
- To delete a shot from a previous session, select **SAVED SESSIONS**, select a session, and select **SHOT LIST**.

2 Select a shot, and select **DELETE**.

Viewing the Session Summary

The session summary shows a list of statistics for your current session.

Select an option:

- To view a summary of the current session, press **OK**, and select **SESSION SUMMARY**.
- To view a summary of a previous session, select **SAVED SESSIONS**, select a session, and select **SESSION SUMMARY**.

Viewing Session History

You can view your shot details for previously recorded sessions.

1 From the main menu, select **SAVED SESSIONS**.

2 Select a session.

3 Select an option:

- To view a summary of the session data, select **SESSION SUMMARY**.
- To view a full list of shots recorded during the selected session, select **SHOT LIST**.

Connectivity Features

ShotView™ App

You can download the ShotView app on your smartphone to view detailed statistics and shot analyses that are recorded on your Xero® C2 chronograph.

You can go to garmin.com/shotviewapp for more information.

Pairing Your Smartphone

To use the connected features of the Xero® C2 chronograph, you must pair it directly through the ShotView™ app, instead of from the Bluetooth® settings on your smartphone.

- 1 Turn on your Xero C2 chronograph, and place the chronograph and your smartphone within 3 m (10 ft.) of each other.
- 2 On your Xero C2 chronograph, select **SETTINGS > CONNECTIVITY**.
- 3 Enable the **BLUETOOTH** option, and select **PAIR PHONE**.
- 4 Using your phone, scan the QR code to download and install the ShotView app.
TIP: You can use the camera app on most phones to scan the QR code.
- 5 Follow the on-screen instructions to sign in to a Garmin® account and complete the pairing and setup process.

Pairing a Garmin® Watch

You can pair your chronograph with a compatible Garmin watch to access session controls, view ballistics data, and import recorded muzzle velocities into the Applied Ballistics® ecosystem.

- 1 On your chronograph, select **SETTINGS > CONNECTIVITY > PAIR GARMIN WATCH**.
- 2 Select an option:
 - On your watch, hold **MENU**, and select **Settings > Connectivity > Sensors & Accessories > Add New**.
 - On your watch, hold **MENU**, and select **Sensors & Accessories > Add New**.
- 3 Select **Xero Chronograph**.
- 4 Follow the on-screen instructions to complete the pairing process on your compatible Garmin watch.

Applied Ballistics® Ecosystem Integration

Applied Ballistics ecosystem integration lets you pull muzzle velocity recorded from your Xero® C2 device straight into your Applied Ballistics solver for long-range shooting solutions delivered to your compatible device or the Applied Ballistics Quantum™ app.

The Applied Ballistics Quantum app allows you to manage ballistic profiles, or upgrade your ballistic solver, if necessary. You can download the Applied Ballistics Quantum app from the app store on your phone.

Settings

Changing the Units of Measure

- 1 Select an option:
 - To change the units of measure during a session, press **OK**, and select **UNITS**.
 - To change the units of measure outside of a session, select **SETTINGS > UNITS**.
- 2 Select a unit of measure, and press **OK**.

Changing the Display Color

- 1 Select an option:
 - To change the display color during a session, press **OK**, and select **DISPLAY COLOR**.
 - To change the display color outside of a session, select **SETTINGS > DISPLAY SETTINGS > DISPLAY COLOR**.
- 2 Press **OK** to cycle through the color options.

Changing the Backlight Brightness

- 1 Select an option:
 - To change the backlight brightness during a session, press **OK**, and select **BACKLIGHT**.
 - To change the backlight brightness outside of a session, select **SETTINGS > DISPLAY SETTINGS > BACKLIGHT**.
- 2 Press **OK** to cycle through the brightness levels.

Changing the Backlight Timeout

The backlight timeout setting sets how long the screen backlight stays on after a period of inactivity.

- 1 Select an option:
 - To change the backlight timeout during a session, press **OK**, and select **BACKLIGHT TIMEOUT**.
 - To change the backlight timeout outside of a session, select **SETTINGS > DISPLAY SETTINGS > BACKLIGHT TIMEOUT**.
- 2 Press **OK** to cycle through the time intervals.

Enabling Projectile Weight Entry

You can enter your projectile weight to calculate the kinetic energy and power factor of your projectile.

Select **SETTINGS > PROJECTILE WEIGHT ENTRY**.

Each time you start a new session, you are prompted to enter the weight of the projectile you are using.

Enabling Downrange Mode

WARNING

When placing or adjusting the device in downrange mode, remain aware of your surroundings and follow any applicable safety protocols associated with the area in which you are shooting. Failure to do so could cause property damage, serious personal injury, or death.

NOTICE

Use of this device in downrange mode could result in possible property damage due to your shooting activities or the shooting activities of others. Garmin® claims no responsibility for and does not warranty such property damage.

Downrange mode sets the screen to flash five times after the chronograph detects a shot. When you are using the device to track velocity downrange, this feature can help improve your awareness of when the chronograph detects a shot.

Select **SETTINGS > DOWNRANGE MODE**.

Changing the Device Language

- 1 Select **SETTINGS > LANGUAGE**.
- 2 Select a language.

Viewing Device Tips

You can view device tips about how to use some chronograph features.

- 1 Select **SETTINGS > DEVICE TIPS**.
- 2 Select a topic.

Connectivity Settings

Select **SETTINGS > CONNECTIVITY**.

BLUETOOTH: Enables or disables Bluetooth® technology.

PAIR PHONE: Enables you to pair your Xero® C2 chronograph with the ShotView™ app on your phone (*Pairing a Your Smartphone, page 12*).

PAIR GARMIN WATCH: Enables you to pair your chronograph with a compatible Garmin® watch (*Pairing a Garmin® Watch, page 12*).

FORGET ALL PAIRED DEVICES: Removes all connected phones and watches from the list of paired devices. This option is available only after a phone or watch is paired.

Resetting Data and Settings

The chronograph offers options for deleting your user data and resetting all settings to the factory default values.

NOTE: If you clear data from the chronograph after you sync with the ShotView™ app, the data will not be deleted from the app.

- 1 Select **SETTINGS > RESET**.
- 2 Select an option:
 - To delete all of your recorded sessions from the chronograph, select **CLEAR ALL SESSIONS**.
 - To reset all settings to factory default values and delete all user data and sessions, select **FACTORY RESET**.
- 3 Select **YES**.

Setting a Device Passcode

NOTICE

If you enter your passcode incorrectly three times, the device locks temporarily. After five incorrect attempts, the device deletes your data and resets to the factory default settings.

You can set up a device passcode to prevent unauthorized users from using your device. Once enabled, you must enter the passcode immediately after you turn on the device.

- 1 Select **SETTINGS > DEVICE PASSCODE**.
- 2 Enable the **PASSCODE** option.
- 3 Enter a four-digit passcode, and select **CONFIRM**.

Changing Your Device Passcode

NOTICE

You must know your existing device passcode to change it. If you enter your passcode incorrectly three times, the device locks temporarily. After five incorrect attempts, the device deletes your data and resets to the factory default settings.

- 1 Select **SETTINGS > DEVICE PASSCODE**.
- 2 Enter your current four-digit passcode.
- 3 Select **CHANGE PASSCODE**.
- 4 Enter your current four-digit passcode.
- 5 Enter a new four-digit passcode.

Deleting Your Device Passcode

NOTICE

You must know your existing device passcode to delete it. If you enter your passcode incorrectly three times, the device locks temporarily. After five incorrect attempts, the device deletes your data and resets to the factory default settings.

- 1 Select **SETTINGS > DEVICE PASSCODE**.

2 Enter your current four-digit passcode.

3 Select **DELETE PASSCODE**.

4 Enter your current four-digit passcode.

The device deletes the passcode and turns off the **PASSCODE** option.

Device Information

Software Updates

Software updates provide changes and improvements to the device features and operation. Software updates are small and take a few minutes to complete.

You can update your chronograph using two methods.

- You can update the chronograph using the ShotView™ app on your smartphone ([Updating the Software Using the ShotView™ App, page 16](#)).
- You can connect the chronograph to a computer and update it using the Garmin Express™ application ([Updating Software with Garmin Express™, page 16](#)).

Updating the Software Using the ShotView™ App

When an update is available, the ShotView app sends it to the chronograph automatically.


When the update transfers to your chronograph, the chronograph prompts you to install the update. If you choose not to install the update, you are prompted to install the update the next time you turn on your chronograph.

Do not turn off your chronograph while the update is installing.


After the update is complete, the chronograph restarts and operates normally.

Updating Software with Garmin Express™


You can use the Garmin Express application to download and install the latest software updates for your chronograph.

- 1 If you do not have the Garmin Express application installed on your computer, go to garmin.com/express and follow the on-screen instructions to install it ([Installing Garmin Express™, page 17](#)).
- 2 Open the  Garmin Express application.
- 3 Connect your chronograph to your computer using a USB-C® cable.

The cable connects to the USB-C port  on your Xero® C2 chronograph, and the other end of the cable connects to an available USB-C port on your computer.

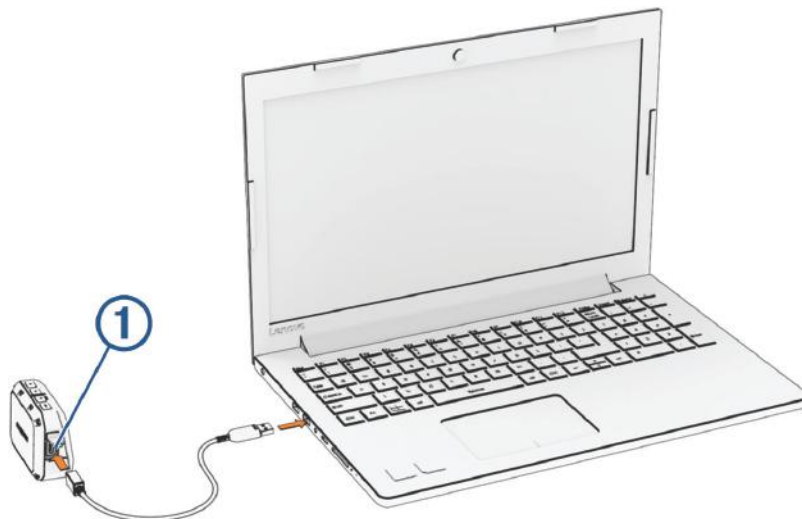

- 4 In the Garmin Express application, click **Add a Device**.
The Garmin Express application searches for your device and displays the device name and serial number.
- 5 Click **Add Device**, and follow the on-screen instructions to add your device to the Garmin Express application.
When setup is complete, the Garmin Express application displays the updates available for your device.

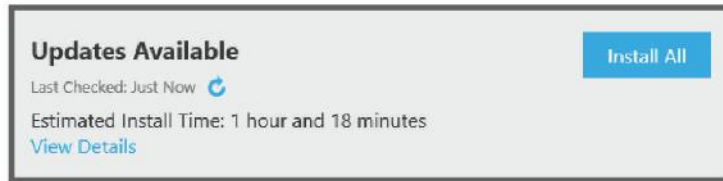

6 Select an option:

- To install all available updates, click **Install All**.
- To install a specific update, click **View Details**, and click **Install** next to the update you want.

The Garmin Express application downloads and installs the updates onto your device.

7 Follow the on-screen instructions during the update process to finish installing updates.

For example, during the update process, the Garmin Express application may instruct you to disconnect and reconnect your device.

Installing Garmin Express™

The Garmin Express application is available for Windows® and Mac® computers.

1 On your computer, go to garmin.com/express.

2 Select an option:

- To view the system requirements and verify the Garmin Express application is compatible with your computer, select **System Requirements**.
- To install on a Windows computer, select **Download for Windows**.
- To install on a Mac computer, select **Download for Mac**.

3 Open the downloaded file, and follow the on-screen instructions to complete the installation.

Device Care

NOTICE

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Avoid chemical cleaners, solvents, sunscreen, and insect repellents that can damage plastic components and finishes.

Secure the weather cap tightly to prevent damage to the USB port.

Avoid extreme shock and harsh treatment, because it can degrade the life of the product.

Cleaning the Outer Casing

NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

1 Clean the outer casing of the device (not the screen) using a cloth dampened with a mild detergent solution.

2 Wipe the device dry.

Getting More Information

You can find more information about this product on the Garmin® website.

- Go to support.garmin.com for additional manuals, articles, and software updates.
- Go to buy.garmin.com, or contact your Garmin dealer for information about optional accessories and replacement parts.

Viewing E-label Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information.

1 From the main menu, select **SETTINGS**.

2 Select **ABOUT**.

Specifications

Battery type	Rechargeable, built-in lithium-ion battery
Rifle measurement accuracy	+/- 0.1% of the target velocity
Bow, pistol, and air rifle measurement accuracy	+/- 0.4% of the target velocity
Maximum shots recorded per second	Rifle session: Up to 10 Pistol session: Up to 3
Operating temperature range	From -10° to 55°C (from 14° to 131°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)
Wireless frequency and transmit power	2400 – 2483,5 MHz: < 13 dBm 24,15 – 24,25 GHz: < 20 dBm
Water rating	IEC 60529 IPX7 ¹

¹ The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to www.garmin.com/waterrating.

Troubleshooting

Resetting the Device

If the device stops responding, you may need to reset it. This does not erase any of your data or settings.

Hold **PWR** for 20 seconds.

The chronograph is not detecting my shot velocity

You can perform these actions to help determine why the chronograph isn't detecting your velocity.

- Verify the chronograph is facing the target.
With the screen facing you, the large, flat side of the chronograph should point at the target.
- Verify the target is at least 20 meters or 20 yards from the chronograph.
- Verify the chronograph and the weapon are properly aligned based on your weapon type ([Recording Shot Data, page 5](#)).
- Verify the session is active.
The shot data screen appears while the session is active.
- Verify that you selected the correct velocity range for your weapon and projectile while setting up your session.
- Verify that you are not exceeding the maximum recorded shots per second ([Specifications, page 18](#)).

The chronograph is detecting shots from the shooter next to me

It is possible for the chronograph to detect shots from adjacent shooters. For best results, you should always ensure the nearest shooter is at least 1.5 m (5 ft.) from your location.

The recorded velocity is higher when the chronograph is mounted to a rifle

When the chronograph is mounted to a rifle, the recorded velocity can appear higher than if the chronograph were separate from the rifle. The rifle's backward movement during recoil offsets the recorded numbers by a small amount. In most cases, the velocity difference is not noticeable. Rifles with a heavy recoil can offset the measurements by up to 3 m/s (10 ft./sec.).

The chronograph temperature is approaching a critical level

To prevent overheating, the Xero® C2 chronograph turns off when it is used at temperatures above the listed operating temperature ([Specifications, page 18](#)). If a warning message appears, you should move the device to a cooler location.

The chronograph does not turn on

- Make sure the chronograph is within the approved operating or charging temperature range ([Specifications, page 18](#)).
- Fully charge the chronograph.

NOTE: A full charge can take up to 5 hours ([Charging the Device, page 4](#)).

If the chronograph does not turn on, disconnect the charger and wait 15 seconds. Reconnect the charger and fully charge the chronograph.

My language is missing from the chronograph

If the language files are missing from your Xero® C2 chronograph, you can reinstall them using the Garmin Express™ application.

- 1 Download and install the Garmin Express application on your computer ([Installing Garmin Express™, page 17](#)).
- 2 Connect the Xero C2 chronograph to your computer using a USB-C® cable.
- 3 From the Garmin Express application, select your Xero C2 device.
- 4 Select **Tools & Content**.
- 5 Select the **Utilities** tab.
- 6 Select **Language Files**.
- 7 Select one or more languages, and select **Install Now**.

support.garmin.com

© 2026 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin logo, and Xero® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Express™ and ShotView™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Mac® is a trademark of Apple Inc, registered in the U.S. and other countries. Applied Ballistics Quantum™ is a trademark, and Applied Ballistics® is a registered trademark of Applied Ballistics, LLC. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such word mark or logo by Garmin is under license. USB-C® is a registered trademark of USB Implementers Forum. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are those of their respective owners.