


# USER MANUAL



NO PROGRESS WITHOUT COMPROMISE

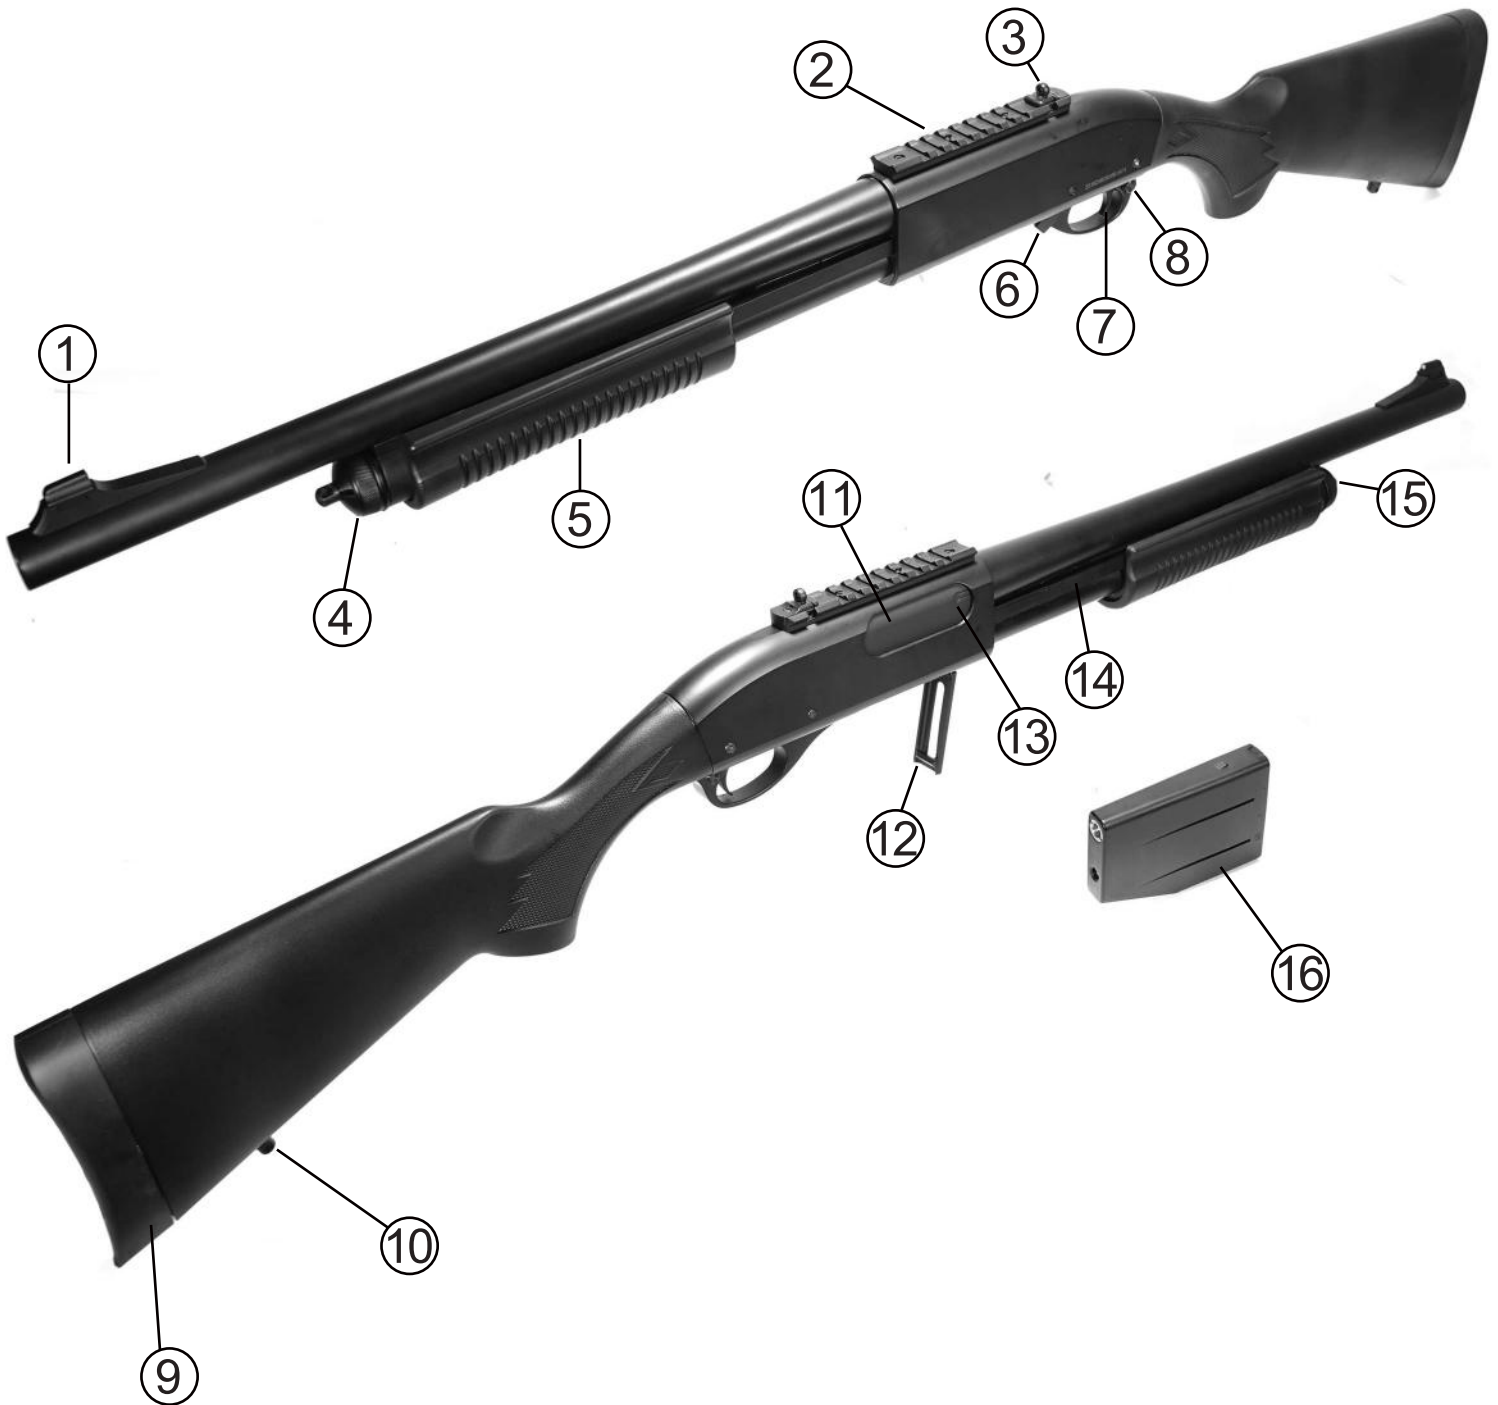

No.	Name	No.	Name
1	Front Sight	9	Recoil Pad
2	Top Rail	10	Rear Sling Swivel
3	Rear Sight	11	Bolt
4	Magazine tube Cap	12	Carrier Latch
5	Forend	13	Hop-up Unit Cover
6	Bolt release catch	14	Forend Tube Assembly
7	Trigger	15	Front Sling Swivel
8	Safety Catch	16	Gas Tank

# USER MANUAL

INTELLIGENT  
MECHANICS FACTORY

# TYPE 870



NO PROGRESS WITHOUT COMPROMISE



- Safety Catch ON.



- Safety Catch OFF.




# USER MANUAL

INTELLIGENT  
MECHANICS FACTORY

# TYPE 870



NO PROGRESS WITHOUT COMPROMISE

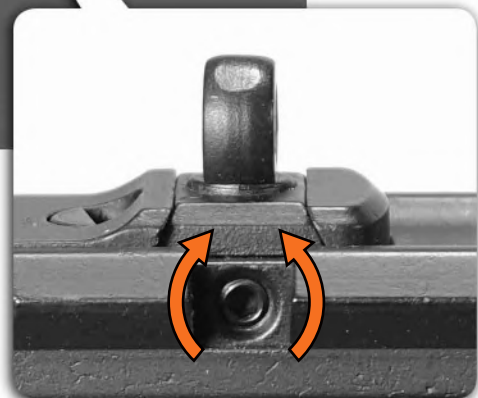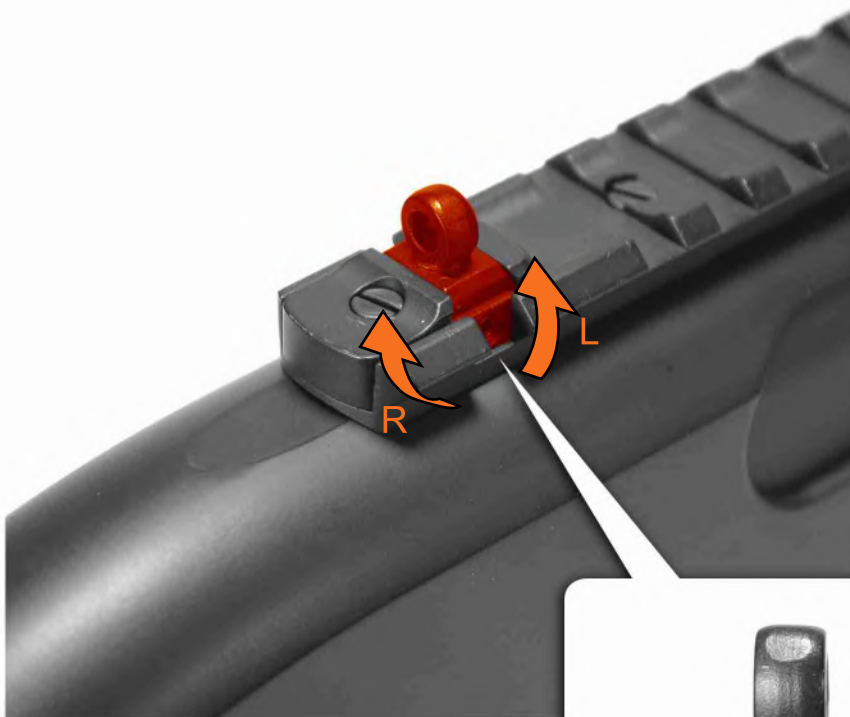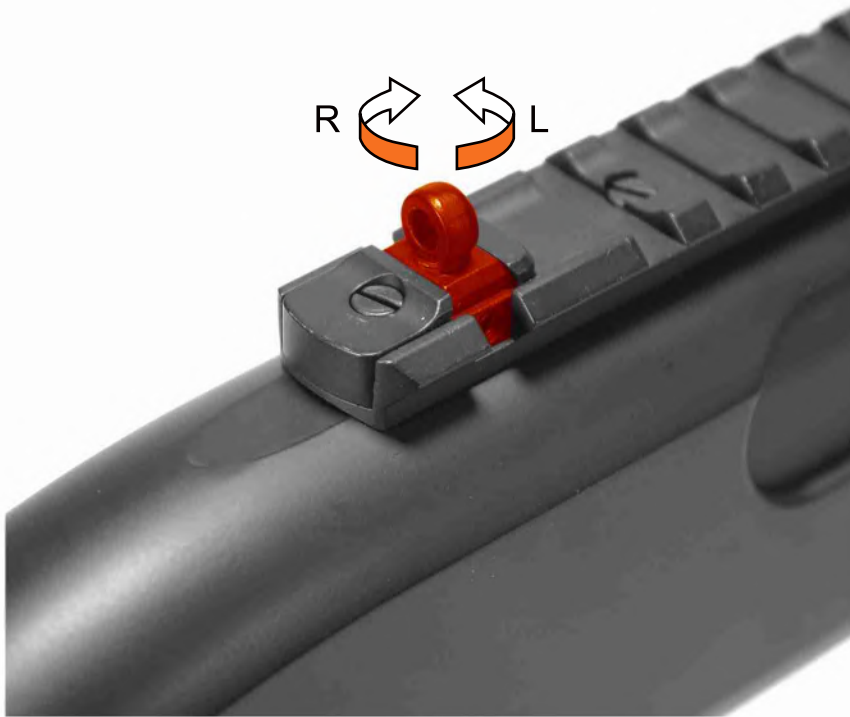


- Adjustable rear sight

# USER MANUAL


INTELLIGENT  
MECHANICS FACTORY  
**TYPE 870**



NO PROGRESS WITHOUT COMPROMISE

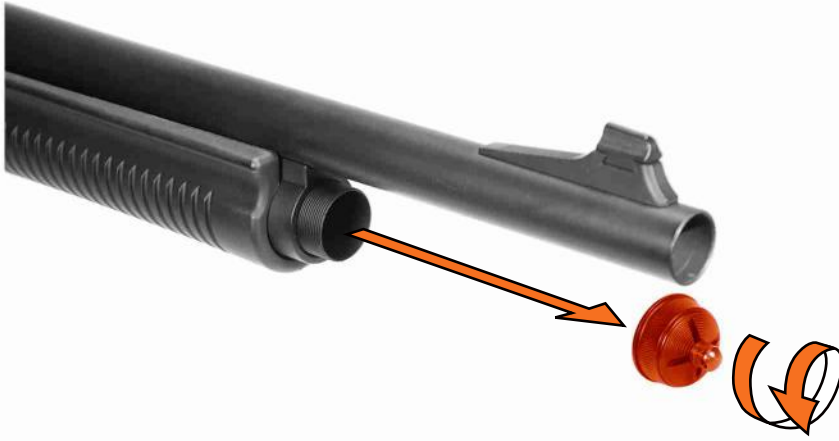

- Magazine tube can carry 2 Shell type magazine.

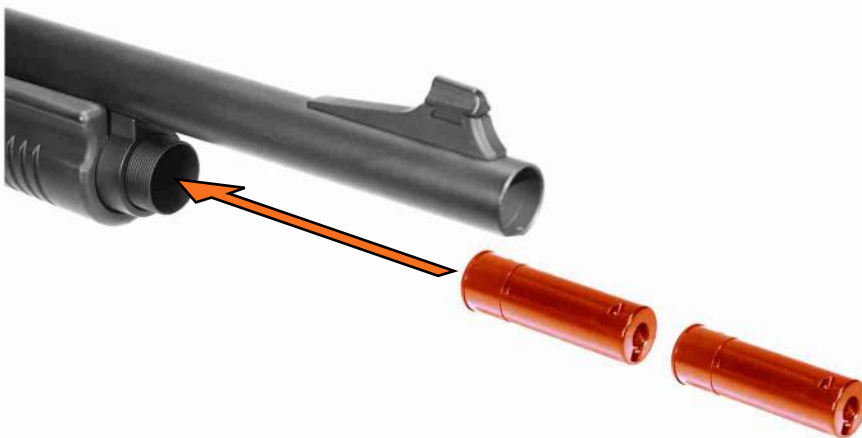

- Top rail in 1913 standard



# USER MANUAL

INTELLIGENT  
MECHANICS FACTORY



# TYPE 870




NO PROGRESS WITHOUT COMPROMISE



- Take out the recoil pad

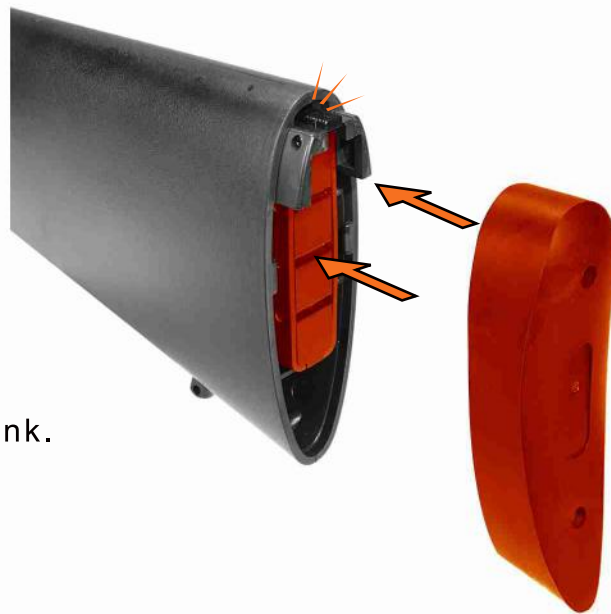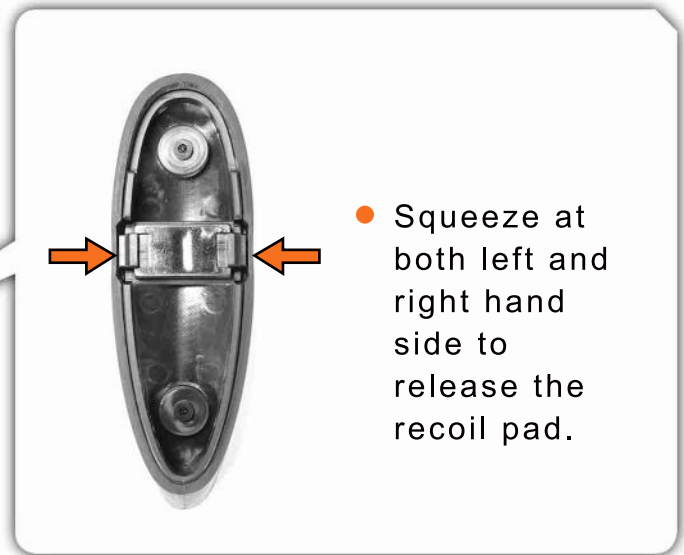

- Insert the gas tank.

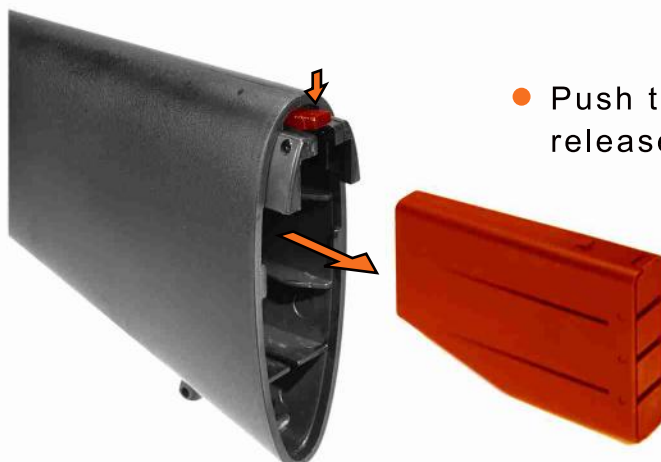

- Push the top button to release the gas tank

# USER MANUAL

INTELLIGENT  
MECHANICS FACTORY

# TYPE 870



NO PROGRESS WITHOUT COMPROMISE



# USER MANUAL

INTELLIGENT  
MECHANICS FACTORY

# TYPE 870



NO PROGRESS WITHOUT COMPROMISE



- Push the bolt release catch to open the carrier latch and **LOAD** the shell type magazine.



- Close the carrier latch after **LOADING**.



- Push the bolt release catch to open the carrier latch and **UNLOAD** the shell type magazine.

# USER MANUAL

INTELLIGENT  
MECHANICS FACTORY  
**TYPE 870**



NO PROGRESS WITHOUT COMPROMISE



● And all the way forward.



● Otherwise will broke the product.



# USER MANUAL


INTELLIGENT  
MECHANICS FACTORY  
**TYPE 870**



NO PROGRESS WITHOUT COMPROMISE



- Pull the forend all the way backward to open the Hop-up unit cover. Switch 3 or 6 rounds per each pump.

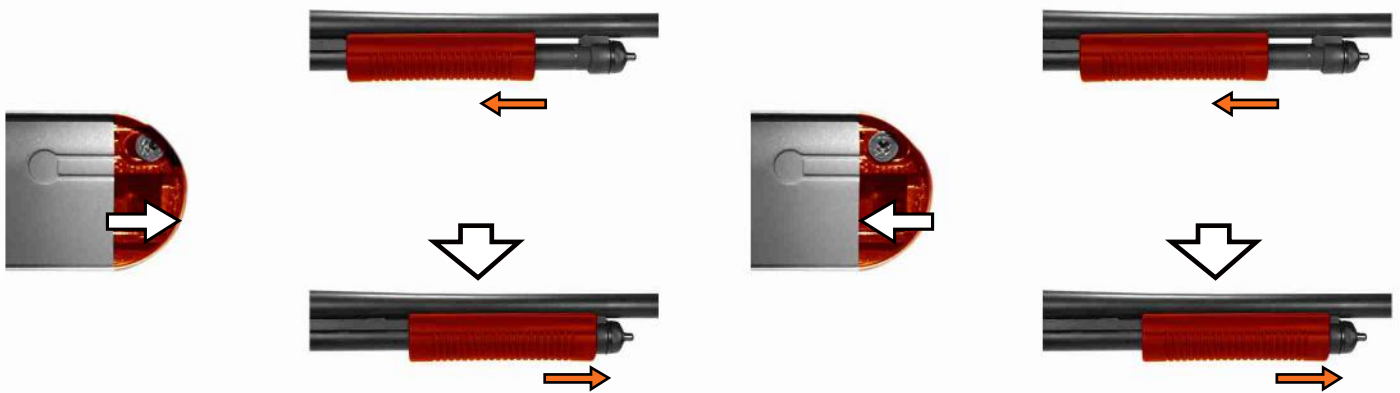

● 3 rounds position.

● 6 rounds position.