



## LIST OF PARTS

1 Barrel *	23 Magazine Housing Front Screw	48 Trigger Pin	71 Butt Plate *
2 Barrel Screw (2x)	24 Magazine Housing Rear Screw	49 Trigger Setting Screw (C)	72 Butt Plate Screw (2x)
3 Front Sight *	25 Magazine Catch	50 Nylon Thread of Trigger Setting Screw	73 Front Connecting Screw
4 Front Sight Cover *	26 Magazine Catch Spring	51 Trigger Dead-Travel Screw (B)	74 Rear Connecting Screw
5 Front Sight Base *	27 Magazine Catch Pin	52 Nylon Thread of Trigger Dead Travel Screw	75 Trigatti Sling Swivel Holder (2x) *
6 Front Sight Base Screw *	28 Bolt Catch	53 Trigger Pull Setting Screw (A)	76 Safari Sling Swivel Holder (2x) *
7 Front Sight Setting Screw (A) *	29 Bolt Catch Spring	54 Trigger Pull Setting Screw Spring	77 Magazine *
8 Front Sight Setting Screw (B) *	30 Bolt Catch Pin	55 Trigger Pull Screw Nut	
9 Front Sight Pin *	31 Bolt Guide	56 Safety	Spare parts assemblies:
10 Rear Sight Base *	32 Bolt	57 Safety Spring	M Front Sight
11 Rear Sight Base Screw (2x) *	33 Extractor	58 Trigger Bar	H1 Rear sight with base
12 Rear Sight Leaf *	34 Holder	59 Trigger Bar Spring	H2 Rear sight without base
13 Rear Sight Leaf Spring *	35 Extractor Spring	60 Safety Yoke Ring	V Magazine Housing
14 Rear Sight Plate *	36 Striker	61 Trigger Bar Pin	Z Bolt
15 Rear Sight Screw (2x) *	37 Bolt Handle	62 Safety Yoke Ring (3x)	S Trigger mechanism
16 Slider	38 Bolt Handle Ball	63 Cam	
17 Rear Sight Button *	39 Cocking Indicator	64 Cam Washer	
18 Rear Sight Button Spring *	40 Cocking Indicator Spring	65 Cam Washer Screw	
19 Magazine Housing Insert	41 Striker Spring	66 Cam Pin	
20 Magazine Housing Insert Pin	42 Lock	67 Frame	
21 Receiver	43 Lock Pin	68 Trigger Guard	
22 Magazine Housing	44 Trigger Mechanism Holder	69 Stock *	
	45 Holder Screw	70 Stock Insert *	
	46 Holder Screw Washer		
	47 Trigger		

The parts marked \* differ depending on the model of the rifle, or as the case may be in some versions are entirely missing.