



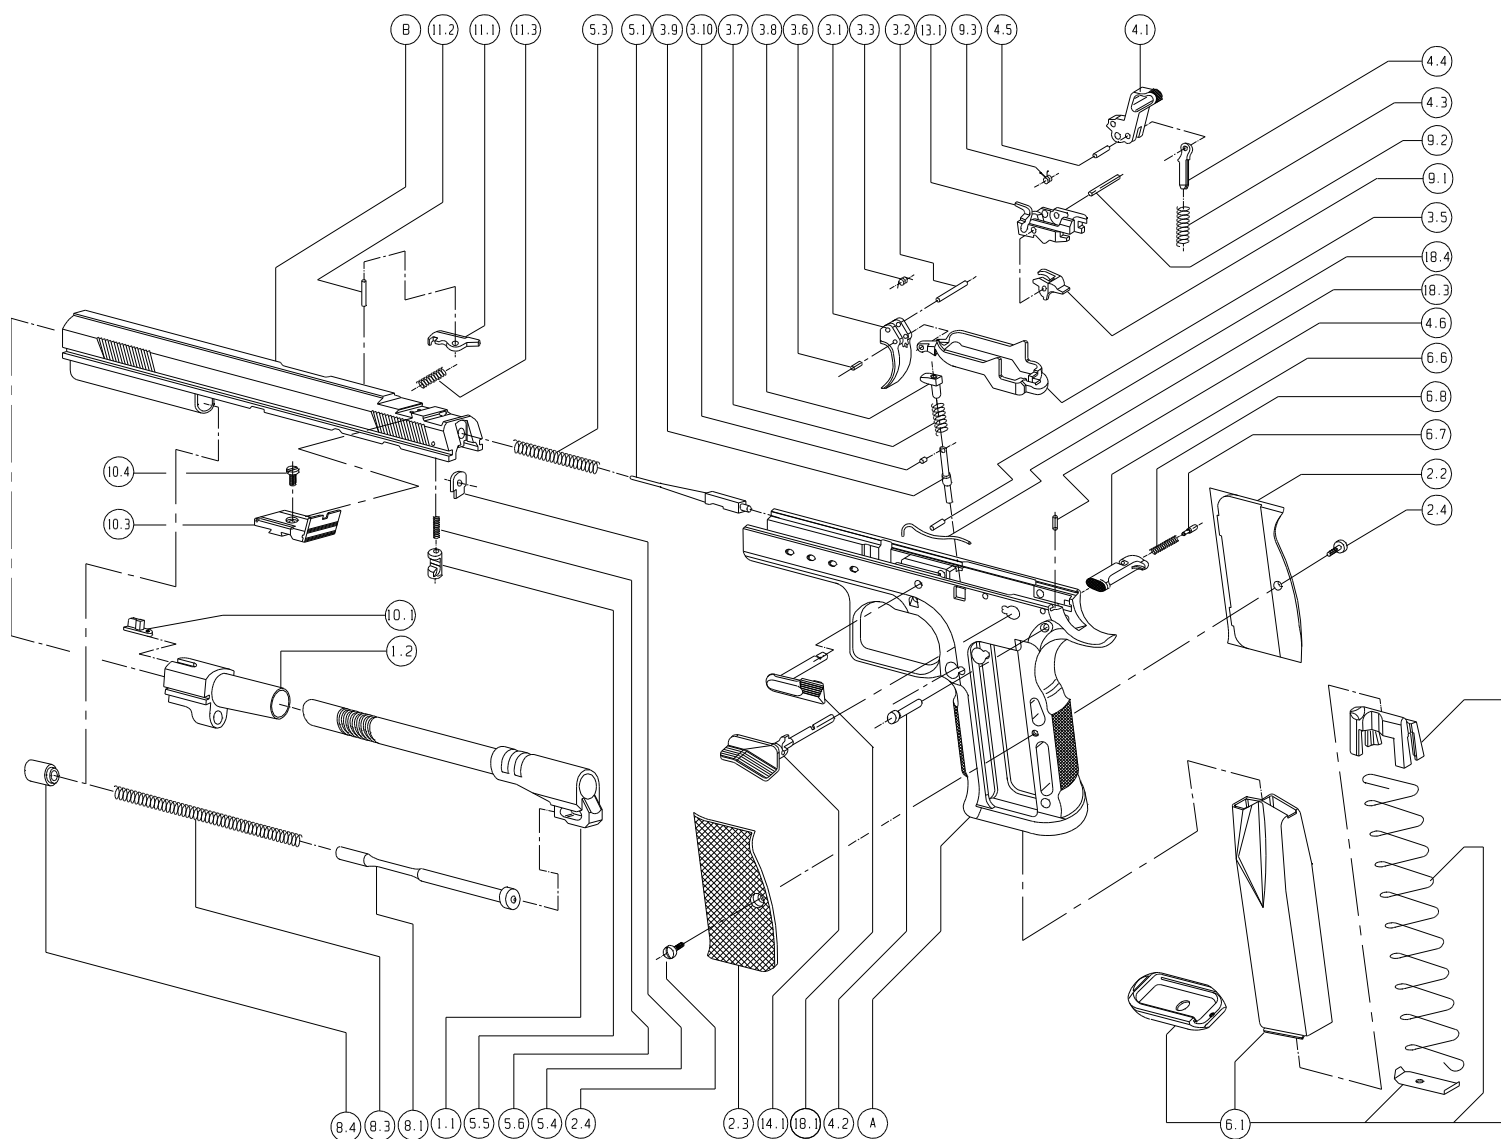

LISTA DELLE PARTI

- | | |
|---------------------------------|---------------------------------|
| 1.1 - CANNA | 5.3 - MOLLA |
| 1.2 - COMPENSATORE | 5.4 - PIASTRINA |
| 2.2 - GUANCINA DESTRA | 5.5 - SICURA AUTOMATICA |
| 2.3 - GUANCINA SINISTRA | 5.6 - MOLLA SICURA AUTOMATICA |
| 2.4 - VITI GUANCINA | 6.1 - CARICATORE |
| 3.1 - GRILLETTO | 6.6 - GANCIO |
| 3.2 - SPINA | 6.7 - GUIDA MOLLA GANCIO |
| 3.3 - MOLLA | 6.8 - MOLLA GANCIO |
| 3.5 - LEVA GRILLETTO | 8.1 - GUIDAMOLLA RECUPERO |
| 3.6 - SPINA LEVA | 8.3 - MOLLA RECUPERO |
| 3.7 - MOLLA LEVA | 8.4 - BUSSOLA |
| 3.8 - BLOCCHETTO LEVA GRILLETTO | 9.1 - LEVA SCATTO |
| 3.9 - GUIDAMOLLA LEVA GRILLETTO | 9.2 - SPINA |
| 3.10 - SPINA GUIDAMOLLA | 9.3 - MOLLA |
| 4.1 - CANE | 10.1 - MIRINO |
| 4.2 - SPINA | 10.2 - VITE MIRINO |
| 4.3 - MOLLA | 10.3 - TACCA DI MIRA REGOLABILE |
| 4.4 - GUIDAMOLLA | 10.4 - VITE TACCA DI MIRA |
| 4.5 - SPINA GUIDAMOLLA | 11.1 - ESTRATTORE |
| 4.6 - SPINA FERMO SPINA CANE | 11.2 - SPINA |
| 5.1 - PERCUSSORE | 11.3 - MOLLA |
| | 13.1 - BLOCCO ESPULSORE |
| | 14.1 - SICURA LEVA SCATTO |
| | 18.1 - LEVA SMONTAGGIO |
| | 18.3 - MOLLA LEVA |
| | 18.4 - SPINA MOLLA LEVA |
| | A - FUSTO |
| | B - OTTURATORE |

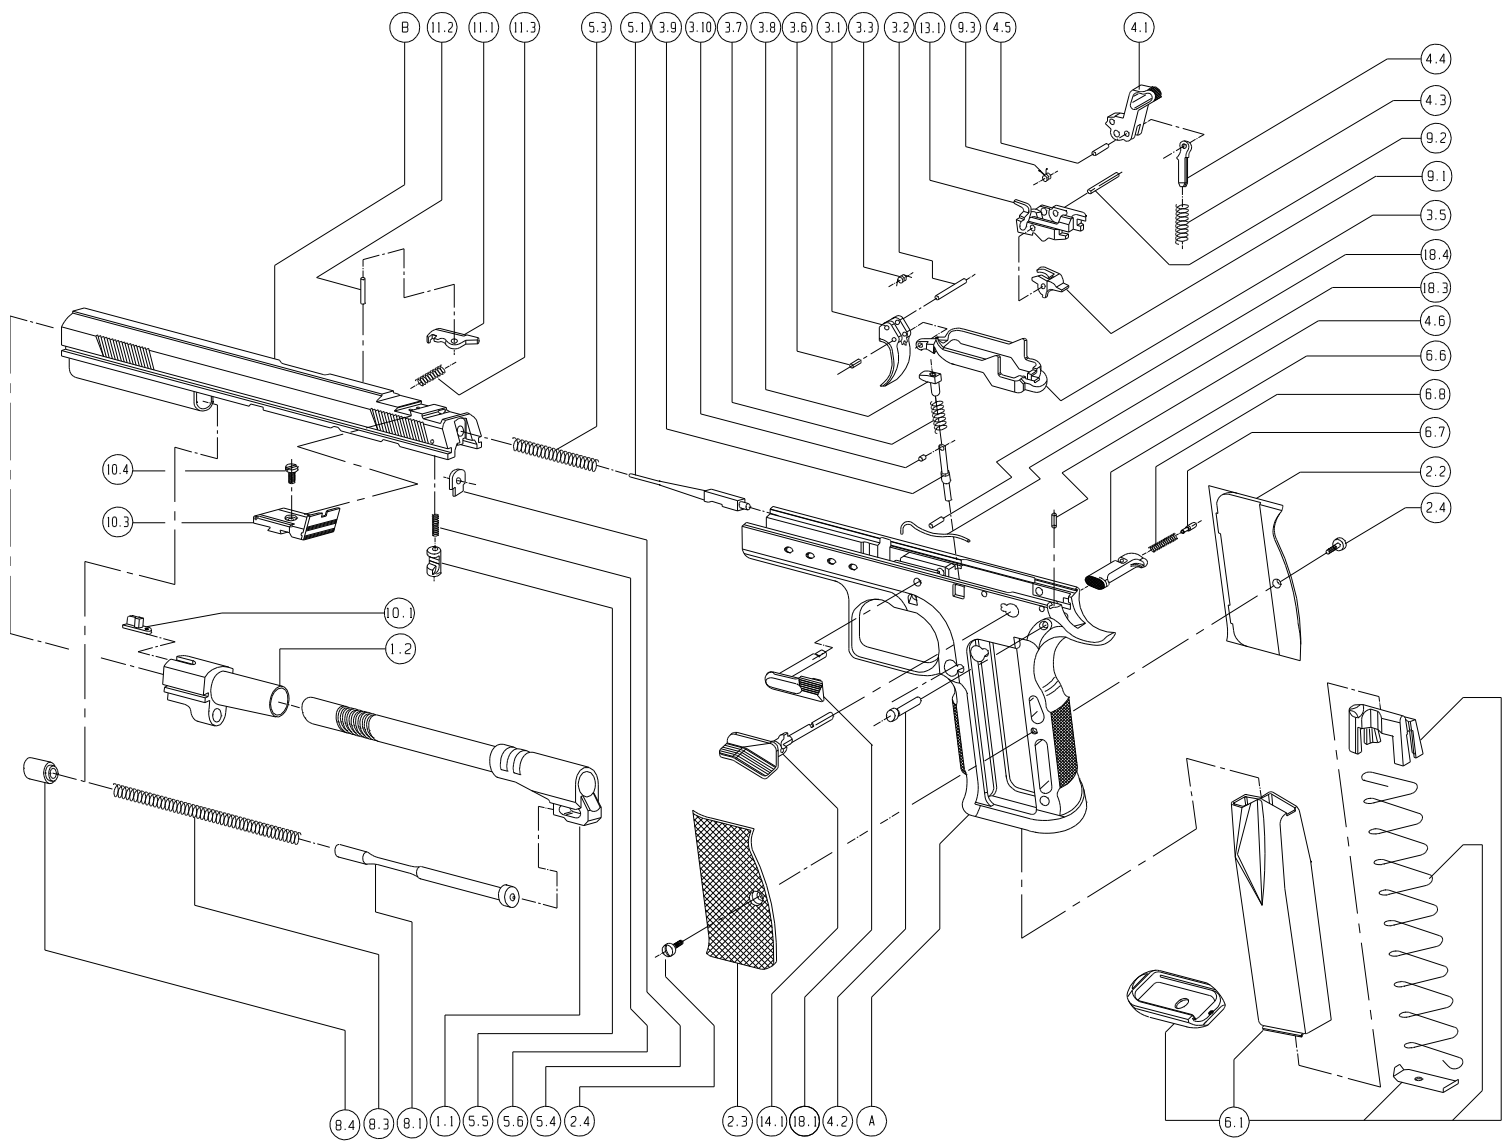

PARTS LIST

- | | |
|--------------------------------|------------------------------------|
| 1.1 - BARREL | 5.3 - FIRING PIN SPRING |
| 1.2 - COMPENSATOR | 5.4 - FIRING PIN RETAINER |
| 2.2 - RIGHT GRIP | 5.5 - FIRING PIN SAFETY |
| 2.3 - LEFT GRIP | 5.6 - FIRING PIN SAFETY SPRING |
| 2.4 - GRIP SCREWS | 6.1 - MAGAZINE |
| 3.1 - TRIGGER | 6.6 - MAGAZINE CATCH |
| 3.2 - TRIGGER PIN | 6.7 - MAGAZINE CATCH PLUNGER |
| 3.3 - TRIGGER SPRING | 6.8 - MAGAZINE CATCH SPRING |
| 3.5 - TRIGGER BAR | 8.1 - RECOIL SPRING GUIDE |
| 3.6 - TRIGGER BAR PIN | 8.3 - RECOIL SPRING |
| 3.7 - TRIGGER BAR SPRING | 8.4 - BUSHING |
| 3.8 - TRIGGER BAR GUIDE | 9.1 - SEAR |
| 3.9 - TRIGGER BAR PLUNGER | 9.2 - SEAR PIN |
| 3.10 - TRIGGER BAR PLUNGER PIN | 9.3 - SEAR SPRING |
| 4.1 - HAMMER | 10.1 - FRONT SIGHT |
| 4.2 - HAMMER PIN | 10.2 - FRONT SIGHT SCREW |
| 4.3 - HAMMER SPRING | 10.3 - ADJUSTABLE REAR SIGHT |
| 4.4 - HAMMER STRUT | 10.4 - ADJUSTABLE REAR SIGHT SCREW |
| 4.5 - HAMMER STRUT PIN | 11.1 - EXTRACTOR |
| 4.6 - HAMMER PIN PIN | 11.2 - EXTRACTOR PIN |
| 5.1 - FIRING PIN | 11.3 - EXTRACTOR SPRING |
| | 13.1 - SEAR HOUSING |
| | 14.1 - SAFETY |
| | 18.1 - SLIDE STOP PIN |
| | 18.3 - SLIDE STOP PIN SPRING |
| | 18.4 - SLIDE STOP PIN SPRING PIN |
| | A - FRAME |
| | B - SLIDE |